

# R951V Stocking Parts List

## Stocking Parts: Panels - Miscellaneous (1)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R951V 040 3 A 17	R951V 060 3 A 17	R951V 070 3 A 17	R951V 070 5 A 21
10	Stk,3	Water Trap - Condensate Drain (See Note 3 for Gasket)	68-104346-01	68-104346-01	68-104346-01	68-104346-01
	Stk,3	Condensate Trap Gasket (See Note 3)	68-104151-01	68-104151-01	68-104151-01	68-104151-01

## Stocking Parts: Panels - Miscellaneous (2)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R951V 085 5 A 21	R951V 100 5 A 21	R951V 115 5 A 24	
10	Stk,3	Water Trap - Condensate Drain (See Note 3 for Gasket)	68-104346-01	68-104346-01	68-104346-01	
	Stk,3	Condensate Trap Gasket (See Note 3)	68-104151-01	68-104151-01	68-104151-01	

## Stocking Parts: Field Conversions

No.	Notes	MODEL SIZE	R951V All All All All				
	Stk	Complete Parts Bag (includes items 1 - 9)	68-104446-01				
No.	Notes	MODEL SIZE	R951V All All All All				
	Stk	Conversion Kit (includes items 1 - 11)	RXGY-CK				
No.	Notes	MODEL INPUT STAGE AIRFLOW CABINET WIDTH CONFIGURATION	R951V All All All All				
	Stk	Zero Clearance Downflow Kit (includes items 1 - 5)	RXGY-ZK				

## Stocking Parts: Electrical Group (1)

No.	Notes	MODEL INPUT STAGE AIRFLOW CABINET WIDTH	R951V 040 3 A 17	R951V 060 3 A 17	R951V 070 3 A 17	R951V 070 5 A 21
20a	Stk	Pressure Switch Assembly	42-105499-06	42-105499-06	42-105499-06	42-105499-06
22	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-104465-02	47-104465-01	47-104465-02	47-104465-01
23	Stk	Limit - Manual Reset (Burner Compartment)	47-104888-02 (2)	47-104888-02 (2)	47-104888-01 (2)	47-104888-02 (2)
24	Stk	Transformer	46-24124-06	46-24124-06	46-24124-06	46-24124-06
25a	Stk	IDB - Induced Draft Blower (with Gasket)	70-104157-02	70-104157-02	70-104157-02	70-104157-02
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R951V 085 5 A 21	R951V 100 5 A 21	R951V 115 5 A 24	
20a	Stk	Pressure Switch Assembly	42-105499-01	42-105499-04	42-105499-09	
22	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-104465-01	47-104465-02	47-104465-02	
23	Stk	Limit - Manual Reset (Burner Compartment)	47-104888-02 (2)	47-104888-02 (2)	47-104888-02 (3)	
24	Stk	Transformer	46-24124-06	46-24124-06	46-24124-06	
25a	Stk	IDB - Induced Draft Blower (with Gasket)	70-104157-02	70-104157-02	70-104157-02	

## Stocking Parts: Blower Group (1)

No.	Notes	MODEL INPUT STAGE AIRFLOW CABINET WIDTH CONFIGURATION	R951V 040 3 A 17	R951V 060 3 A 17	R951V 070 3 A 17	R951V 070 5 A 21
30	Stk	Blower Assembly - Includes items 31a, 31b, 32, 33, 34, 35 and Motor Wiring Harnesses:	AS-108522-01*	AS-108517-01*	AS-108517-01*	AS-108523-01*

10-May-2023

92-42800-R951V-STOCKING

31b	Stk	Blower Wheel	PD703026	PD703027	PD703027	PD703028
32	Stk	Blower Motor	51-108481-01	51-108481-01	51-108481-01	51-108483-01
	Stk	Belly Band Motor Mount Kit (includes Motor Mount Arms, Belly Band and Mounting Hardware)	AS-53148-91	AS-53148-91	AS-53148-91	AS-53148-91
<b>No.</b>	<b>Notes</b>	<b>MODEL</b> <b>INPUT</b> <b>AIRFLOW</b> <b>DESIGN SERIES</b> <b>CABINET WIDTH</b>	<b>R951V</b> <b>085</b> <b>5</b> <b>A</b> <b>21</b>	<b>R951V</b> <b>100</b> <b>5</b> <b>A</b> <b>21</b>	<b>R951V</b> <b>115</b> <b>5</b> <b>A</b> <b>24</b>	
30	Stk	Blower Assembly (Includes items 31a, 31b, 32, 33, 34, 35 and Motor Wiring Harnesses):	AS-108523-01*	AS-108523-01*	AS-108524-01*	
31b	Stk	Blower Wheel	PD703028	PD703028	PD703029	
32	Stk	Blower Motor	51-108483-01	51-108483-01	51-108483-01	
	Stk	Belly Band Motor Mount Kit (includes Motor Mount Arms, Belly Band and Mounting Hardware)	AS-53148-91	AS-53148-91	AS-53148-91	

### Stocking Parts: Heat Exchanger-Burner Group, Gas Controls (1)

<b>No.</b>	<b>Notes</b>	<b>MODEL</b> <b>INPUT</b> <b>AIRFLOW</b> <b>DESIGN SERIES</b> <b>CABINET WIDTH</b>	<b>R951V</b> <b>040</b> <b>3</b> <b>A</b> <b>17</b>	<b>R951V</b> <b>060</b> <b>3</b> <b>A</b> <b>17</b>	<b>R951V</b> <b>070</b> <b>3</b> <b>A</b> <b>17</b>	<b>R951V</b> <b>070</b> <b>5</b> <b>A</b> <b>21</b>
40	Stk	Heat Exchanger Assembly	AS-104120-01	AS-104120-02	AS-104120-05	AS-104120-24
41a	Stk	Collector Box Kit (includes Collector Box, Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	68-104111-81	68-104111-84	68-104111-85	68-104111-91
41b	Stk	Collector Box Gasket	68-103546-03	68-103546-03	68-103546-03	68-103546-02
41e	Stk	Water Sensor (2)	47-104184-01	47-104184-01	47-104184-01	47-104184-01
46	Stk	Burner	AS-61984-13*	AS-61984-14*	AS-61984-15*	AS-61984-15*
<b>No.</b>	<b>Notes</b>	<b>MODEL</b> <b>INPUT</b> <b>AIRFLOW</b> <b>DESIGN SERIES</b> <b>CABINET WIDTH</b>	<b>R951V</b> <b>085</b> <b>5</b> <b>A</b> <b>21</b>	<b>R951V</b> <b>100</b> <b>5</b> <b>A</b> <b>21</b>	<b>R951V</b> <b>115</b> <b>5</b> <b>A</b> <b>24</b>	
40	Stk	Heat Exchanger Assembly	AS-104120-17	AS-104120-15	AS-104120-21	
41a	Stk	Collector Box Kit (includes Collector Box, Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	68-104111-86	68-104111-82	68-104111-83	
41b	Stk	Collector Box Gasket	68-103546-02	68-103546-02	68-103546-01	
41e	Stk	Water Sensor (2)	47-104184-01	47-104184-01	47-104184-01	
46	Stk	Burner	AS-61984-16*	AS-61984-17*	AS-61984-18*	
<b>No.</b>	<b>Notes</b>	<b>MODEL</b> <b>GAS CODE</b>		<b>R951V</b> <b>KU</b>		
50	Stk	Gas Valve - Natural Gas		60-103901-01		
	Stk,2	Gas Valve - LP		See Note 2		
51	Stk	M1 Single Stage Furnace Control (IFC)		62-108462-02*		
	Stk	3A Mini Fuse (Control Board)		ATM-3-5PK		
52	Stk	Flame Sensor		62-23543-08		
53	Stk	Spark Ignitor		62-24141-05		
	Stk	LP Conversion Kit - U.S./Canadian Models		FP-38		