

R962V Stocking Parts List

Stocking Parts: Panels - Miscellaneous (1)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 040 3 A 17	R962V 060 3 A 17	R962V 070 3 A 17	R962V 070 5 A 21
10	Stk,3	Water Trap - Condensate Drain (See Note 3 for Gasket)	68-104346-01	68-104346-01	68-104346-01	68-104346-01
	Stk,3	Condensate Trap Gasket (See Note 3)	68-104151-01	68-104151-01	68-104151-01	68-104151-01

Stocking Parts: Panels - Miscellaneous (2)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 085 5 A 21	R962V 100 5 A 21	R962V 115 5 A 24
10	Stk,3	Water Trap - Condensate Drain (See Note 3 for Gasket)	68-104346-01	68-104346-01	68-104346-01
	Stk,3	Condensate Trap Gasket (See Note 3)	68-104151-01	68-104151-01	68-104151-01

Stocking Parts: Field Conversions

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V All All All All
	Stk	Complete Parts Bag (includes items 1 - 9)	68-104446-01
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V All All All All
	Stk	Conversion Kit (includes items 1 - 11)	RXGY-CK
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V All All All All
	Stk	Zero Clearance Downflow Kit (includes items 1 - 5)	RXGY-ZK

Stocking Parts: Electrical Group (1)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 040 3 A 17	R962V 060 3 A 17	R962V 070 3 A 17	R962V 070 5 A 21
20a	Stk	Pressure Switch Assembly (High Fire)	42-105583-08	42-105583-10	42-105583-10	42-105583-13
20b	Stk	Pressure Switch Assembly (Low Fire)	42-105499-09	42-105499-08	42-105499-08	42-105499-10
22	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-104465-02	47-104465-01	47-104465-01	47-104465-01
23	Stk	Limit - Manual Reset (Burner Compartment)	47-104888-01 (2)	47-104888-01 (2)	47-104888-01 (2)	47-104888-01 (2)
24	Stk	Transformer	46-24124-06	46-24124-06	46-24124-06	46-24124-06
25a	Stk	IDB - Induced Draft Blower (with Gasket)	70-104157-03	70-104157-03	70-104157-03	70-104157-03
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 085 5 A 21	R962V 100 5 A 21	R962V 115 5 A 24	
20a	Stk	Pressure Switch Assembly (High Fire)	42-105583-12	42-105583-04	42-105583-11	
20b	Stk	Pressure Switch Assembly (Low Fire)	42-105499-08	42-105499-08	42-105499-07	
22	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-104465-01	47-104465-01	47-104465-02	
23	Stk	Limit - Manual Reset (Burner Compartment)	47-104888-01 (2)	47-104888-01 (2)	47-104888-01 (3)	
24	Stk	Transformer	46-24124-06	46-24124-06	46-24124-06	
25a	Stk	IDB - Induced Draft Blower (with Gasket)	70-104157-03	70-104157-03	70-104157-04	

Stocking Parts: Blower Group (1)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 040 3 A 17	R962V 060 3 A 17	R962V 070 3 A 17	R962V 070 5 A 21
30	Stk	Blower Assembly (Includes items listed below):	AS-108522-01*	AS-108517-01*	AS-108517-01*	AS-108523-01*

31b	Stk	Blower Wheel	PD703026	PD703027	PD703027	PD703028
32	Stk	Blower Motor	51-108481-01	51-108481-01	51-108481-01	51-108483-01
	Stk	Belly Band Motor Mount Kit (includes Motor Mount Arms, Belly Band and Mounting Hardware)	AS-53148-91	AS-53148-91	AS-53148-91	AS-53148-91
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 085 5 A 21	R962V 100 5 A 21	R962V 115 5 A 24	
30	Stk	Blower Assembly (Includes items listed below):	AS-108523-01*	AS-108523-01*	AS-108524-01*	
31b	Stk	Blower Wheel	PD703028	PD703028	PD703029	
32	Stk	Blower Motor	51-108483-01	51-108483-01	51-108483-01	
	Stk	Belly Band Motor Mount Kit (includes Motor Mount Arms, Belly Band and Mounting Hardware)	AS-53148-91	AS-53148-91	AS-53148-91	

Stocking Parts: Heat Exchanger-Burner Group, Gas Controls (1)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET SIZE	R962V 040 3 A 17	R962V 060 3 A 17	R962V 070 3 A 17	R962V 070 5 A 21
40	Stk	Heat Exchanger Assembly	AS-104120-01	AS-104120-10	AS-104120-31	AS-104120-24
41a	Stk	Collector Box Kit (includes Collector Box, Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	68-104111-81	68-104111-95	68-104111-96	68-104111-91
41b	Stk	Collector Box Gasket	68-103546-03	68-103546-03	68-103546-03	68-103546-02
41e	Stk	Water Sensor (2)	47-104184-01	47-104184-01	47-104184-01	47-104184-01
46	Stk	Burner	AS-61984-13*	AS-61984-14*	AS-61984-15*	AS-61984-15*
		Burner Orifice - Natural Gas	See Orifice Selection Chart			
		Burner Orifice - LP	See Orifice Selection Chart			
No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R962V 085 5 A 21	R962V 100 5 A 21	R962V 115 5 A 24	
40	Stk	Heat Exchanger Assembly	AS-104120-18	AS-104120-19	AS-104120-21	
41a	Stk	Collector Box Kit (includes Collector Box Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	68-104111-82	68-104111-98	68-104111-83	
41b	Stk	Collector Box Gasket	68-103546-02	68-103546-02	68-103546-01	
41e	Stk	Water Sensor (2)	47-104184-01	47-104184-01	47-104184-01	
46	Stk	Burner	AS-61984-16*	AS-61984-17*	AS-61984-18*	
		Burner Orifice - Natural Gas	See Orifice Selection Chart			
		Burner Orifice - LP	See Orifice Selection Chart			
No.	Notes	MODEL GAS CODE	R962V KN			
50	Stk	Gas Valve - Natural Gas	60-101921-05			
	Stk,2	Gas Valve - LP	See Note 2			
51	Stk	Rheem M1 2-Stage Furnace Control (IFC)	62-108462-01*			
52	Stk	Flame Sensor	62-23543-08			
53	Stk	Spark Ignitor	62-24141-06*			
	Stk	LP Conversion Kit - U.S./Canadian Models	FP-34			